
 


 


 
 


 



 





 
 
 

 







 


 

 

 



 
 


 

 

 

 

 

 


 


 

 



 
 
 

 

 


 


Original	Replacement
 Power	 Power
 Input 1	 Shift + 1
 Input 2	 Shift + 2
 Input 3	 Shift + 3
 Input 4	 Shift + 4
 Input 5	 Shift + 5
 PC	 Smart
 HMG	 Media
 [i+]/Timer/Info	 Info
 [-]	 3D
 [↔]	 Format
 [←]	 Pre Ch
 CTRL HDMI	 AV
 1	 1
 2	 2
 3	 3
 4	 4

Original	Replacement
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG/DVD Top Menu/Guide	 Guide
 TV/DTV/SAT	 TV/R
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left







 
 

 
 


 
 
 





 


Original	Replacement	Original	Replacement
	 Exit		 Eject
	 Options		 <<
	 Menu		 >>
	 Back		 List
	 Mute		 Text
	 D. Menu		 Shift + Options
	 Red		 Shift + Format
	 Green		 Dual
	 Yellow		
	 Blue		
	 Rec		
	 Pause		
	 Stop		
	 Play		
	 I<<		
	 Subt		
	 >>I		





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG/DVD Top Menu/Guide	 Guide
 Menu/Home	 Menu
 Return	 Back
 Enter	 Ok
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 Pause	 Pause
 Stop	 Stop
 Play	 Play
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Vol+ Tv	 Vol +
 Vol- Tv	 Vol -
 Mute Tv	 Mute



