







 
 

 

 
 
 


 
 
 


 
 
 
 
 

 
 
 

 
 
 
 
 
 
 
 

 
 

 
 


 
 
 

 



 









 



 



 

 
 
 
 
 
 

 
 






 

 






Original	Replacement	Original	Replacement
 Power	 Power	 PR+	 Ch +
 Source	 AV	 PR-	 Ch -
 HDMI	 3D	 Mute	 Mute
 1	 1	 CH.List	 List
 2	 2	 Media.P	 Media
 3	 3	 Menu	 Menu
 4	 4	 Guide	 Guide
 5	 5	 Tools	 Options
 6	 6	 Info	 Info
 7	 7	 Return	 Back
 8	 8	 Exit	 Exit
 9	 9	 OK	 Ok
 0	 0	 Up	 Up
 TTX/MIX	 Text	 Down	 Down
 PRE-CH	 Pre Ch	 Right	 Right
 Vol+	 Vol +	 Left	 Left
 Vol-	 Vol -	 Red/A	 Red





Original		Replacement		Original	Replacement
	Green/B		Green		
	Yellow/C		Yellow		
	Blue/D		Blue		
	Internet/@Tv		Smart		
	S.Mode	 + 	Shift + Dual		
	Alarm		Sleep		
	Dual/I-II		Dual		
	P.Size		Format		
	Subt.		Subt		
	<<		<<		
	>>		>>		
	Pause		Pause		
	Rec		Rec		
	Play		Play		
	Stop		Stop		

