





Original	Replacement
	 Power
	 1
	 2
	 3
	 Smart / List
	 4
	 5
	 6
	 Picture / Format
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Mute / Dimmer
	 Info / Angle
	 Menu / Home



Original	Replacement
	 CH+ / Page+
	 Up
	 Left
	 Vol-
	 OK
	 Right
	 Vol+
	 Text / Goto
	 CH- / Page-
	 Down
	 AV / Input / RDS
	 Setup / OPT /
	 Display / Media
	 Zoom / Size
	 D.Menu / Top
	 Red / Netflix / Search
	 Green / APP / Repeat






 
 


















 














Original	Replacement
	 Power
	 1
	 2
	 3
	 Smart / List
	 4
	 5
	 6
	 Picture / Format
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Info / Angle
	 Menu / Home
	 CH+ / Page+


Original	Replacement
	 Up
	 Left
	 Vol-
	 OK
	 Right
	 Vol+
	 Text / Goto
	 CH- / Page-
	 Down
	 AV / Input / RDS
	 Setup / OPT /
	 Pause / Step / Freeze
	 Stop / Hold
	 Play / Slow
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
























 

 















Original	Replacement
	 Power
	 1
	 2
	 3
	 Smart / List
	 4
	 5
	 6
	 Picture / Format
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Mute / Dimmer
	 Info / Angle
	 Menu / Home















 










Original	Replacement
	 CH+ / Page+
	 Up
	 Left
	 Vol-
	 OK
	 Vol+
	 Right
	 Text / Goto
	 CH- / Page-
	 Down
	 AV / Input / RDS
	 Setup / OPT /
	 Pause / Step / Freeze
	 Stop / Hold
	 Play / Slow
	 I<< / Preset-
	 >>I / Preset+







 
 
















 















Original	Replacement
	 Power
	 1
	 2
	 3
	 Smart / List
	 4
	 5
	 6
	 Picture / Format
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Info / Angle
	 Menu / Home
	 CH+ / Page+

Original	Replacement
	 Up
	 Vol-
	 Left
	 OK
	 Vol+
	 Right
	 Text / Goto
	 CH- / Page-
	 Down
	 AV / Input / RDS
	 Setup / OPT /
	 Pause / Step / Freeze
	 Stop / Hold
	 Play / Slow
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-



