

 




 

 
 








 


 
 

 



 
 

 

 






 

 
 






 
 
 

 


 


 










Original	Replacement
 Power	 Power
 Optical / Tv Sound	 TV/R
 Function	 D. Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Repeat	 Text
 I<< Skip	 I<<
 << Scan	 <<

Original	Replacement
 Scan >>	 >>
 Skip >>I	 >>I
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Vol +	 Vol +
 Vol -	 Vol -
 Mute	 Mute
 Speaker Level	 Options
 Mic / Echo	 Info
 Sound Effect	 Dual
 Home	 Smart
 Night/Moon	 Pre Ch
 Info / Menu	 Menu
 Up / Preset +	 Up
 Down / Preset -	 Down
 Right / Tuning +	 Right





Original	Replacement	Original	Replacement
 Left / Tuning -	 Left		
 Enter	 Ok		
 Back	 Back		
 Pop Up	 Guide		
 Sleep	 Sleep		
 Red / RDS	 Red		
 Green / PTY	 Green		
 Yellow / PTY	 Yellow		
 Blue /	 Blue		
 Power TV	 Shift + Power		
 Input Tv	 AV		
 Vol + Tv	 Shift + Vol +		
 Vol - Tv	 Shift + Vol -		
 PR/CH + Tv	 Ch +		
 PR/CH - Tv	 Ch -		

