



	Original	Replacement		Original	Replacement
		Power		Power	
		1		1	
		2		2	
		3		3	
		4		4	
		5		5	
		6		6	
		7		7	
		8		8	
		9		9	
		0		0	
		Del		Pre Ch	
		Input Select		AV	
		Select Drive		D. Menu	
		Cast Vieta		Media	
		Function Menu		Menu	
		Direct Navigator		List	
		Guide		Guide	
		Return		Back	
		Option		Options	
		Exit		Exit	
		i / Status		Info	
		Pause / Pause Live Tv		Pause	
		Stop		Stop	
		Play/x1.3		Play	
		I<< Skip		I<<	
		Skip >>I		>>I	
		<< Slow/Search		<<	
		Slow/Search >>		>>	
		Prog/Check		Sleep	
		OK		Ok	
		Up		Up	
		Down		Down	
		Right		Right	





Original	Replacement	Original	Replacement
 Left	 Left	 Vol + Tv	 Vol +
 Red	 Red	 Vol - Tv	 Vol -
 Green	 Green	 AV / Input Tv	 Shift + AV
 Yellow	 Yellow	 CH + Tv	 Shift + Ch +
 Blue	 Blue	 CH - Tv	 Shift + Ch -
 Rec	 Rec	 Power Tv	 Shift + Power
 Direct Tv Rec	 TV/R	 Manual Skip +60s	 Shift + Pre Ch
 Rec Mode	 Shift + Rec	 Manual Skip -10s	 Shift + Guide
 Ext Link	 Smart		
 Audio	 Dual		
 [≡♦] / STTL	 Subt		
 [≡] / Text	 Text		
 Display	 Shift + Info		
 Chapter	 Format		
 Time Slip	 3D		
 CH/Page+	 Ch +		
 CH/Page-	 Ch -		

