

 





 







 

 

 

 

 

 

 

 


 
 







Original	Replacement
 Power	 Power
 Tv/Radio	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 FAV	 Fav / Marker / PC
 Text	 Text / Goto
 Hold	 +  Shift + Stop /
 TVG	 Guide / EPG / -/--
 Subtitle	 Subtitle / EQ
 Size	 Zoom / Size
 Aspect	 +  Shift + Picture / Format
 Media	 Smart / List
 Subpage	 Eject / Surround
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Replacement
 <<	 << / Tune-
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 Sleep	 Sleep / Timer
 >>I/Index	 >>I / Preset+
 Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-





Original	Replacement	Original	Replacement
 Mute	 Mute / Dimmer	 P.Mode	 Picture / Format
 Display	 Display / Media	 S.Mode	 Sound / Title
 CH+	 CH+ / Page+		
 CH-	 CH- / Page-		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 -/--	 Shift + Guide / EPG / -/--		
 Recall	 Back / Return		
 Source	 AV / Input / RDS		

Original	Replacement
