





 


 


 

 



 












 
 



 





 



 






 


 

 

 

 
 



 




 



 



 



 

 
 









 



 






 
 







Original	Replacement	Original	Replacement
	Power		Power
	i		Info
	TV/DVD		TV/R
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Timer		Shift + AV
	Mute		Mute
	Input Select		AV
	TV/DVB-T		Media
	Guide (EPG)		Guide
	Exit/Cancel		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter/CH List		Ok
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Setup/Analog		Menu
	Digital Menu		Shift + D. Menu
	P↔P		Pre Ch
	Picture/Size		Format
	[≡]		Text





Original	Replacement	Original	Replacement
 TV/Radio	 Shift + TV/R	 I<<	 I<<
 Return	 Back	 Pause	 Pause
 DVD Menu	 D. Menu	 Stop	 Stop
 Top Menu	 Shift + Menu	 >>I	 >>I
 [...]	 Subt	 Red	 Red
 Audio	 Dual	 Green	 Green
 Repeat A-B	 Shift + Text	 Yellow	 Yellow
 Play Mode	 Shift + Play	 Blue	 Blue
 Jump	 Sleep		
 Zoom	 Shift + Eject		
 <I/[≡+]	 List		
 [≡o]/[≡o]/Marker	 3D		
 [≡?]/Angle	 Smart		
 [≡♦]/I>	 Options		
 <<	 <<		
 Play	 Play		
 >>	 >>		

