






| Original | Replacement |
|---|---|
|  |  Power |
|  |  Source |
|  |  Smart Tv |
|  |  Home |
|  |  Bluetooth |
|  |  Disc Menu |
|  |  Up |
|  |  Top Menu |
|  |  Left |
|  |  OK |
|  |  Right |
|  |  Down |
|  |  Back |
|  |  Display / Media |
|  |  Red / Netflix / Search |
|  |  Green / APP / Repeat |
|  |  Yellow / YouTube / Repeat |

| Original | Replacement |
|---|---|
|  |  Blue / Prime Video / Random |
|  |  Eject / Surround |
|  |  Play / Slow |
|  |  Pause / Step / Freeze |
|  |  Stop / Hold |
|  |  I< / Preset- |
|  |  << / Tune- |
|  |  >> / Tune+ |
|  |  >> / Preset+ |
|  |  Vol+ |
|  |  Mute / Dimmer |
|  |  Shift + 3 |
|  |  Vol- |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  4 |



