




 







 

 

 

 
 
 

 

 
 
 

 
 
 












 

 

 



 







 




 








Original	Replacement	Original	Replacement
	Power		Power
	[...]		Subt
	Audio		Dual
	Picture/[ ]		Format
	Recall/V≡		Pre Ch
	T-C/Guide		Guide
	OSD/Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	T		Text
	M		Menu
	I>/i		Info
	E		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<</ <		<<
	Stop		Stop
	Play		Play
	Pause		Pause






 







 

 

 

 
 
 

 

 
 
 

 
 
 












 

 

 



 







 




 






Original	Replacement	Original	Replacement
			
>>/>	>>		







Original	Replacement	Original	Replacement
	Power		Power
	[...]		Subt
	Audio		Dual
	Picture/[■]		Format
	Recall/V≡		Pre Ch
	T-C/Guide		Guide
	OSD/Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	T		Text
	M		Menu
	E		Exit
	I>/i		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<</I<		<<
	Stop		Stop
	Play		Play
	Pause		Pause








 

 

 

 



 

 



 













 













 


 
 

 
 
 

 












Original		Replacement		Original		Replacement	
	>>/>		>>				





Original		Replacement		Original		Replacement	
	Power		Power		T		Text
	[...]		Subt		M		Menu
	Audio		Dual		E		Exit
	Picture/[ ]		Format		Up		Up
	Recall/V		Pre Ch		Down		Down
	T-C/Guide		Guide		Right		Right
	OSD/Mute		Mute		Left		Left
	1		1		OK		Ok
	2		2		Red		Red
	3		3		Green		Green
	4		4		Yellow		Yellow
	5		5		Blue		Blue
	6		6		<</ <		<<
	7		7		Stop		Stop
	8		8		Play		Play
	9		9		Pause		Pause
	0		0		>>/>		>>

