

 
 




 



 
 




Original	Replacement
	Power
	Guide
	Tv Input
	AV Input
	Menu
	Text
	[≡◆]/STTL
	[+]/Aspect
	i
	Exit
	Netflix
	APPS
	Left
	Up
	Right
	Home
	OK



 

 

 

 









 











Replacement	Original
	Power
	Guide / EPG / -/--
	AV / Input / RDS
	Shift + AV / Input / RDS
	Menu / Home
	Text / Goto
	Subtitle / EQ
	Picture / Format
	Info / Angle
	Exit / Cancel / Clear
	Shift + Red / Netflix /
	Smart / List
	Left
	Up
	Right
	Shift + Menu /
	OK

Original	Replacement
	Option
	Down
	Back/Return
	Red
	Green
	Yellow
	Blue
	Vol+
	Mute
	PR+
	Vol-
	PR-
	1
	2
	3
	4
	5

Replacement	Original
	Setup / OPT /
	Down
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Vol+
	Mute / Dimmer
	CH+ / Page+
	Vol-
	CH- / Page-
	1
	2
	3
	4
	5





	Original	Replacement	Original	Replacement
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	?/Help	 D.Menu / Top		
	0	 0		
	Last View	 Fav / Marker / PC		
	<<	 << / Tune-		
	Play	 Play / Slow		
	>>	 >> / Tune+		
	<<	 << / Preset-		
	Pause	 Pause / Step / Freeze		
	>>	 >> / Preset+		
	Stop	 Stop / Hold		
	Rec	 Rec / Rec Mode		

