







 



 























 



 



 







 











 







| Original   | Replacement   | Original  | Replacement   |
|--|---|---|---|
|  Standby/On   |  Power                 |  Text          |  Text / Goto           |
|  Mute         |  Mute / Dimmer         |  Input Select  |  AV / Input / RDS      |
|  Play         |  Play / Slow           |  Menu/Pop Menu |  Menu / Home           |
|  Pause        |  Pause / Step / Freeze |  Up            |  Up                    |
|  Stop         |  Stop / Hold           |  [i+]          |  Info / Angle          |
|  Rec          |  Rec / Rec Mode        |  Left          |  Left                  |
|  <<           |  << / Tune-            |  OK            |  OK                    |
|  >>           |  >> / Tune+            |  Right         |  Right                 |
|  I<<          |  I<< / Preset-         |  Exit          |  Exit / Cancel / Clear |
|  >>I          |  >>I / Preset+         |  Down          |  Down                  |
|  Audio       |  Audio / Lang I/II    |  Return/Back  |  Back / Return        |
|  Subtitle   |  Subtitle / EQ       |  Prog+       |  CH+ / Page+         |
|  Open/Close |  Eject / Surround    |  Display     |  Display / Media     |
|  Timeshift  |  Sleep / Timer       |  Prog-       |  CH- / Page-         |
|  Sat Link   |  TV/Radio /          |  1           |  1                   |
|  Top Menu   |  D.Menu / Top        |  2           |  2                   |
|  Setup      |  Setup / OPT /       |  3           |  3                   |





| Original |            | Replacement |                             |
|----------|------------|-------------|-----------------------------|
|          | 4          |             | 4                           |
|          | 5          |             | 5                           |
|          | 6          |             | 6                           |
|          | 7          |             | 7                           |
|          | 8          |             | 8                           |
|          | 9          |             | 9                           |
|          | Guide      |             | Guide / EPG / -/--          |
|          | 0          |             | 0                           |
|          | Red        |             | Red / Netflix / Search      |
|          | Green      |             | Green / APP / Repeat        |
|          | Yellow     |             | Yellow / YouTube / Repeat   |
|          | Blue       |             | Blue / Prime Video / Random |
|          | Rec Mode   |             | Shift + Rec / Rec Mode      |
|          | →/V.Replay |             | Shift + >>  / Preset+       |
|          | AD         |             | Shift + Audio / Lang I/II   |
|          | Timer Prog |             | Shift + Sleep / Timer       |
|          | Option     |             | Shift + Setup / OPT / Tools |

| Original |          | Replacement |                               |
|----------|----------|-------------|-------------------------------|
|          | →/V.Skip |             | Shift + Right                 |
|          | Clear    |             | Shift + Exit / Cancel / Clear |
|          | A1       |             | Shift + 1                     |
|          | Disc     |             | Shift + 3                     |
|          | HDD      |             | Shift + 7                     |

