 

 
 
 

 
 
 

 
 


 

 


 

 

 
 
 
 
 
 
 
 



 
 
 




 
 

 

 
 

 
 
 



 

 
 
 



 

 

 
 
 









 




 


 
 

 

 
 




Original	Replacement	Original	Replacement
	Power		Power
	Time/Play		Format
	Clock/Timer		AV
	Dimmer		Media
	Auto Off		Blue
	Sleep		Sleep
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Pre Ch
	DEL		D. Menu
	Program		Shift + Sleep
	Repeat		Text
	Play Mode		Shift + Play
	USB Play/Pause		Pause
	CD Play/Pause		Play
	AUX		Green
	Fast Forward		Fast Forward
	Radio		TV/R
	Fast Reverse		Fast Reverse
	Stop		Stop
	Re-Master		Back
	D.Bass		Exit
	Display		Info





Original		Replacement		Original		Replacement	
	Surround		Dual				
	Bass		Subt				
	Preset EQ		Options				
	Treble		Smart				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				
	Auto Preset		Guide				
	Tune Mode		Red				
	FM Mode		Yellow				
	Input Level		3D				

