 












 


 
 



 







 



 

 



 
 
 

 

 
 

 
 


 
 


 
 
 
 

 

 
 
 
 


 




Original	Replacement	Original	Replacement
 Power	 Power	 Mute	 Mute
 Standby	 +  Shift + Power	 Rec/Disc Skip CD	 Rec
 CD	 Smart	 Pause CD	 Pause
 1 CD	 1	 Play CD	 Play
 2 CD	 2	 >> CD	 >>
 3 CD	 3	 << CD	 <<
 4 CD	 4	 Stop CD	 Stop
 5 CD	 5	 >> CD	 >>
 6 CD	 6	 << CD	 <<
 7 CD	 7	 Sleep	 Sleep
 8 CD	 8	 Display CD	 +  Shift + Info
 9 CD	 9	 Stereo	 List
 0 CD	 0	 Music	 Dual
 +10 CD	 Guide	 Entertain	 Subt
 ENT CD	 Pre Ch	 Movie	 TV/R
 Vol+	 Vol +	 Standard	 Text
 Vol-	 Vol -	 Select	 Options








Original	Replacement
Exto Sur.	Format
Direct ST	3D
Speakers	Red
Enhancer	Green
Night	Yellow
Straight	Blue
Set Menu	Menu
Title/Level/Band	Media
Return/Dab	Back
Up	Up
Down	Down
Enter	Ok
Right/+	Right
Left/-	Left
Display	Info
*	AV
DVR	D. Menu

Original	Replacement
1*	Shift + 1
2*	Shift + 2
3*	Shift + 3
4*	Shift + 4
5*	Shift + 5
6*	Shift + 6
7*	Shift + 7
8*	Shift + 8
9*	Shift + 9
0*	Shift + 0
ENT*	Shift + Pre Ch
Return/DAB	Shift + Back
Menu/Set Menu/Search	Shift + Menu
Title/Level/Band*	Shift + Media
Display*	Shift + AV
Up*	Shift + Up
Enter*	Shift + Ok



 

 



 



 
 

 
 


 
 
 

 

 

 

 




 
 
 


 
 
 


 
 
 







 









 







Original	Replacement	Original	Replacement
 Down*	 +  Shift + Down		
 Right/+*	 +  Shift + Right		
 Left/-*	 +  Shift + Left		





Original		Replacement		Original		Replacement	
	Power AV		Shift + AV		Down DVD		Down
	Power		Power		Right/+ DVD		Right
	Standby		Shift + Power		Left/- DVD		Left
	DVD		Smart		Menu/Set Menu/Search		Menu
	Rec/Disc Skip		Rec		Return/DAB Memory DVD		Back
	Pause DVD		Pause		Display DVD		Info
	Play DVD		Play		Title/Level/Band DVD		Media
	Stop DVD		Stop		1 DVD		1
	I<< DVD		I<<		2 DVD		2
	>>I DVD		>>I		3 DVD		3
	<< DVD		<<		4 DVD		4
	>> DVD		>>		5 DVD		5
	Vol+		Vol +		6 DVD		6
	Vol-		Vol -		7 DVD		7
	Mute		Mute		8 DVD		8
	Up DVD		Up		9 DVD		9
	Enter DVD		Ok		0 DVD		0



 








 

 

 



 

 


 

 
 


 








Original		Replacement		Original		Replacement	
	+10 DVD		Guide				
	ENT DVD		Pre Ch				
	DTV/CBL		D. Menu				
	V-AUX		AV				
	Sleep		Sleep				






 



 

 

 
 
 
 



 










 





 
Original	Replacement
 Power AV	 AV
 Power	 Power
 Standby	 +  Shift + Power
 MD/CD-R	 Smart
 1 MD/CD-R	 1
 2 MD/CD-R	 2
 3 MD/CD-R	 3
 4 MD/CD-R	 4
 5 MD/CD-R	 5
 6 MD/CD-R	 6
 7 MD/CD-R	 7
 8 MD/CD-R	 8
 9 MD/CD-R	 9
 0 MD/CD-R	 0
 +10 MD/CD-R	 Guide
 ENT MD/CD-R	 Pre Ch
 Pause MD/CD-R	 Pause

Original	Replacement
 Play MD/CD-R	 Play
 >>I MD/CD-R	 >>I
 I<< MD/CD-R	 I<<
 Stop MD/CD-R	 Stop
 << MD/CD-R	 <<
 >> MD/CD-R	 >>
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Display	 Info
 Sleep	 Sleep





Original	Replacement
 Power	 Power
 Standby	 +  Shift + Power
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Sleep	 Sleep
 Tuner	 Smart
 I<< Tuner	 I<<
 >>I Tuner	 >>I
 << Tuner	 <<
 >> Tuner	 >>
 1 Tuner	 1
 2 Tuner	 2
 3 Tuner	 3
 4 Tuner	 4
 5 Tuner	 5
 6 Tuner	 6

Original	Replacement
 7 Tuner	 7
 8 Tuner	 8
 9 Tuner	 9
 0 Tuner	 0
 ENT Tuner	 Pre Ch
 Up Tuner	 Up
 Enter Tuner	 Ok
 Down Tuner	 Down
 Right/+ Tuner	 Right
 Left/- Tuner	 Left
 Band Tuner	 Media
 DAB Memory	 Back
 Search Mode	 Menu
 Display Tuner	 Info
 Multi CH In	 D. Menu

