



 




 

 



 

 

 

 









 

 

 







 

 



 


 




 



 




 





Original		Replacement		Original		Replacement	
	Power		Power		Zoom		WIDE
	Open/Close		P/C / FAV		Camera/Digest		OPT+
	1		1		Title/PBC		BACK
	2		2		Menu/RTN		MENU
	3		3		I<</Prev/AF		First
	4		4		>>I/Next/Text		Last
	5		5		<</FR/SR		Rewind
	6		6		>>/FF/SF		Fast Forward
	7		7		Play/Pause/Eon		Play
	8		8		Stop/PTY		Stop
	9		9		>I</Step		Pause
	0		0		Setup		MEDIA
	Clear		EXIT		Up		UP
	Sub-T		Subt.		Down		DOWN
	On/Off		TV/R		Right		RIGHT
	Audio		Audio		Left		LEFT
	A-B		Shift + OPT+		Sel		OK



