
















 






Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 CH.List	 Smart / List
 P-	 CH- / Page-
 Media P.	 Display / Media
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	E-Manual		D.Menu / Top
	3D		Shift + 3
	Sports		Sound / Title
	Stop		Stop / Hold
	<<		<< / Tune-
	I<<		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	>>I		>>I / Preset+

