
 
 

 

 


 



 

 
 


 
 




Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 GUIDE Guide
 Back	 RETURN BACK Back
 P.Mode	 SHIFT + PICTURE FORMAT Shift + Format
 S.Mode	 DUAL Dual
 Sleep	 PROG SLEEP Sleep

Original	Replacement
 NICAM	 Smart
 Menu	 Menu
 Source	 AV
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Exit	 Exit
 Display	 Info
 Vol +	 Vol +
 Vol -	 Vol -
 List	 List
 Fav List	 Pre Ch
 CH +	 Ch +
 CH -	 Ch -
 TV / Radio	 TV/R





Original	Replacement	Original	Replacement
 CPG	 Media		
 Aspect	 Format		
 Freeze	 Pause		
 Index	 D. Menu		
 Cancel	 Shift + Back		
 Subpage	 Subt		
 Text	 Text		
 Reveal	 Options		
 Size	 3D		
 Hold	 Stop		
 Mix	 Rec		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Cyan	 Blue		

