



Original	Replacement	Original	Replacement
 P100	 Display / Media	 AV	 AV / Input / RDS
 Power	 Power	 0	 0
 REV	 << / Tune-	 -/--	 Guide / EPG / -/--
 Doub	 Audio / Lang I/II	 P+	 CH+ / Page+
 1	 1	 Up	 Up
 2	 2	 Mute	 Mute / Dimmer
 3	 3	 TV/TXT	 TV/Radio /
 Hold	 Stop / Hold	 Menu	 Menu / Home
 4	 4	 Left	 Left
 5	 5	 Vol-	 Vol-
 6	 6	 OK	 OK
 Sub	 Subtitle / EQ	 Right	 Right
 Update	 D.Menu / Top	 Vol+	 Vol+
 7	 7	 Swap	 Back / Return
 8	 8	 P-	 CH- / Page-
 9	 9	 Down	 Down
 Mix	 Text / Goto	 16:9	 Picture / Format





	Original	Replacement	Original	Replacement
	Red	 SEARCH		Red / Netflix / Search
	Green	 REPEAT		Green / APP / Repeat
	Yellow	 REPEAT A-B		Yellow / YouTube / Repeat
	Blue	 RANDOM		Blue / Prime Video / Random
	Violet	 SMART		Smart / List
	[ ]	 SETUP		Setup / OPT /
	♪	 SOUND		Sound / Title
	PP	+ SMART		Shift + Smart / List

