

 

















Original		Replacement		Original		Replacement	
	P100		Display / Media		AV		AV / Input / RDS
	Power		Power		0		0
	REV		<< / Tune-		-/--		Guide / EPG / -/--
	Doub		Audio / Lang I/II		P+		CH+ / Page+
	1		1		Up		Up
	2		2		Mute		Mute / Dimmer
	3		3		TV/TXT		TV/Radio /
	Hold		Stop / Hold		Menu		Menu / Home
	4		4		Left		Left
	5		5		Vol-		Vol-
	6		6		OK		OK
	Sub		Subtitle / EQ		Right		Right
	Update		D.Menu / Top		Vol+		Vol+
	7		7		Swap		Back / Return
	8		8		P-		CH- / Page-
	9		9		Down		Down
	Mix		Text / Goto		16:9		Picture / Format





Original	Replacement
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Violet	 Smart / List
 []	 Setup / OPT /
 Sound / Title	 Sound / Title
 PP	 Shift + Smart / List

Original	Replacement

