



Original	Replacement	Original	Replacement
 Power	 Power	 FAV-	 Shift + Ch -
 Mute	 Mute	 P.Mode	 Media
 1	 1	 S.Mode	 Options
 2	 2	 CH+	 Ch +
 3	 3	 CH-	 Ch -
 4	 4	 Vol+	 Vol +
 5	 5	 Vol-	 Vol -
 6	 6	 Input	 AV
 7	 7	 Sleep	 Sleep
 8	 8	 Aspect	 3D
 9	 9	 Info	 Info
 0	 0	 Menu	 Menu
 -/--	 Shift + Guide	 Exit	 Exit
 Recall	 Back	 Up	 Up
 Audio	 Dual	 Down	 Down
 FAV	 Pre Ch	 Right	 Right
 FAV+	 Shift + Ch +	 Left	 Left





Original		Replacement		Original		Replacement	
	OK		Ok		Yellow		Yellow
	Text		Text		Blue		Blue
	Index		Smart				
	Play/Mix/T		Play				
	Pause		Pause				
	Stop/Reveal		Stop				
	<</Hold		<<				
	>>/Subpage		>>				
	I<<		I<<				
	>>I/Cancel		>>I				
	Rec		Rec				
	Size		Format				
	EPG		Guide				
	Tv/Radio		TV/R				
	Sub-T		Subt				
	Red		Red				
	Green		Green				

