

 
 

 
 
 










Original	Replacement	Original	Replacement
 Power	 Power	 Pause	 Pause
 Sleep	 Sleep	 Stop	 Stop
 Display	 Info	 Clear	 Exit
 Clock Timer	 Guide	 Enter	 Ok
 Clock Timer Set	 Options	 EQ	 Dual
 Tuner Memory	 3D	 Disc Skip	 List
 Play Mode/Tuning Mode	 TV/R	 Vol+	 Vol +
 Repeat/FM	 Text	 Vol-	 Vol -
 Tape	 Red	 Album+	 Ch +
 Band/Tuner	 Green	 Album-	 Ch -
 CD	 Yellow		
 Function	 Menu		
 >> /+	 >>		
 <</-	 <<		
 >>	 >>		
 <<	 <<		
 Play	 Play		

Original	Replacement	Original	Replacement
 Power	 Power	 Pause	 Pause
 Sleep	 Sleep	 Stop	 Stop
 Display	 Info	 Clear	 Exit
 Clock Timer	 Guide	 Enter	 Ok
 Clock Timer Set	 Options	 EQ	 Dual
 Tuner Memory	 3D	 Disc Skip	 List
 Play Mode/Tuning Mode	 TV/R	 Vol+	 Vol +
 Repeat/FM	 Text	 Vol-	 Vol -
 Tape	 Red	 Album+	 Ch +
Band/Tuner	Green	Album-	Ch -
CD	Yellow		
Function	Menu		
>> /+	>>		
<</-	<<		
>>	>>		
<<	<<		
Play	Play		

