


 












 


















 


















	Original	Replacement		Original	Replacement
STEP	Step	 +  Shift + Pause / Step /	ANGLE	Angle	 Info / Angle
SEARCH	Search	 Red / Netflix / Search	AUDIO	Audio	 Audio / Lang I/II
MUTE	Mute	 Mute / Dimmer	MENU/PBC	Menu PBC	 Menu / Home
SOURCE	Source	 AV / Input / RDS	TITLE	Title	 Sound / Title
1	1	 1		Up	 Up
2	2	 2		Stop	 Stop / Hold
3	3	 3		Play	 Play / Slow
4	4	 4		Left	 Left
5	5	 5		Enter	 OK
6	6	 6		Right	 Right
7	7	 7		Mode	 Smart / List
8	8	 8		Pause	 Pause / Step / Freeze
9	9	 9		Setup	 Setup / OPT /
0	0	 0		Down	 Down
10+	10+	 Guide / EPG / -/--		Vol-	 Vol-
DISPLAY	Display	 Display / Media		Vol+	 Vol+
SUBTITLE	Subtitle	 Subtitle / EQ		Repeat	 Green / APP / Repeat





Original	Replacement	Original	Replacement
(SLOW)	Slow	 + 	Shift + Play /
	l<<		l<< / Preset-
	>>l		>>l / Preset+
	Program		TV/Radio /
	Zoom		Zoom / Size
	<<		<< / Tune-
	>>		>> / Tune+

