












 













 






Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Nicam		Setup / OPT /

Original	Replacement	Original	Replacement
	Sleep		Sleep / Timer
	Source		AV / Input / RDS
	CH+		CH+ / Page+
	Vol+		Vol+
	Info		Info / Angle
	CH-		CH- / Page-
	Vol-		Vol-
	Media		Display / Media
	Freeze		Shift + Pause / Step /
	Aspect		Shift + Picture / Format
	EPG		Guide / EPG / -/--
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down





Original	Replacement
Exit	Exit / Cancel / Clear
Text	Text / Goto
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop/Hold	Stop / Hold
<<	<< / Tune-
Size	Zoom / Size
>>/Reveal	>> / Tune+
I<</Index	I<< / Preset-
>>I/Subpage	>>I / Preset+
Lang	Audio / Lang I/II
Subtitle	Subtitle / EQ
Rec	Rec / Rec Mode
R.List	Smart / List
TV/Radio	TV/Radio /
Timeshift	D.Menu / Top
Red	Red / Netflix / Search

Original	Replacement
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

