 


 







 






 





 



 
 


 
 
 



 


 



 
 

 
 



 





















 







 









 




Original	Replacement	Original	Replacement
 On/Standby	 Power	 Sleep	 Sleep
 1	 1	 Bass/Treble	 Dual
 2	 2	 X-Bass	 Subt
 3	 3	 Random	 Media
 4	 4	 I<<<</Tuning	 I<<
 5	 5	 >>>>/Tuning	 >>I
 6	 6	 Preset Up	 Up
 7	 7	 Preset Down	 Down
 8	 8	 Enter	 Ok
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 10+	 Guide	 Mute	 Mute
 Repeat	 Text	 Folder	 Smart
 Open/Close	 Eject	 Demo/Dimmer	 3D
 Memory	 Back	 CD	 Yellow
 Clear	 Exit	 USB	 Blue
 Clock/Timer	 Shift + AV	 Tuner/Dab	 Green





Original	Replacement	Original	Replacement
 Input/Audio Line	 AV		
 iPod	 Red		
 (Tv Out)/Display	 TV/R		
 Menu	 Menu		
 Play/Pause	 Play		
 Display CD/USB	 Info		
 Stop CD/USB	 Stop		
 Play/Pause	 Pause		
 ASPM RDS	 Format		
 PTY RDS	 Pre Ch		
 Display RDS	 Shift + Info		
 Scan DAB	 Left		
 Enter DAB	 Shift + Ok		
 Display DAB	 Right		

