 

 

 

 
 

 







 


 




 



 


 

 

 
 
 

 

 




 



 
 
 
 

 
 



 




Original		Replacement		Original		Replacement	
	Power		Power		Down		Down
	Info		Info		Right		Right
	Subtitle		Subt		Left		Left
	DTV/VCR		AV		1		1
	CH+		Ch +		2		2
	CH-		Ch -		3		3
	Vol+		Vol +		4		4
	Vol-		Vol -		5		5
	Mute		Mute		6		6
	Menu		Menu		7		7
	Exit		Exit		8		8
	EPG		Guide		9		9
	FAV		Pre Ch		0		0
	Page+		Shift + Ch +		TTX		Text
	Page-		Shift + Ch -		Tv/Radio		TV/R
	OK		Ok		Pause		Pause
	Up		Up		Audio		Dual





Original	Replacement	Original	Replacement
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Recall	 Back		

