


 








 



 



















 



 



 





 





 

 









 









 







Original		Replacement		Original		Replacement	
	Power		Power		1		1
	Power Tv	 + 	Shift + Power		2		2
	Open/Close		Eject		3		3
	Theatre Sync		Smart		4		4
	Tv Input		AV		5		5
	Tv CH+		Ch +		6		6
	Tv CH-		Ch -		7		7
	Display		Info		8		8
	Function		Options		9		9
	Disc Skip		Media		0		0
	Sound Field		Red		Clear		Exit
	Movie/Music		Green		System Menu		Menu
	Dynamic Bass		Yellow		Muting		Mute
	Video Format		Blue		Picture Navi		List
	Audio		Dual		Vol+		Vol +
	Subtitle/D.Tuning		Subt		Vol-		Vol -
	Angle		Text		DVD Menu		D. Menu





Original	Replacement
 Menu TV	 Shift + D. Menu
 -/-- Tv	 Guide
 10/0 Tv	 Shift + 0
 Return Tv	 Shift + Back
 1 Tv	 Shift + 1
 2 Tv	 Shift + 2
 3 Tv	 Shift + 3
 4 Tv	 Shift + 4
 5 Tv	 Shift + 5
 6 Tv	 Shift + 6
 7 Tv	 Shift + 7
 8 Tv	 Shift + 8
 9 Tv	 Shift + 9
 OK	 Ok
 Return	 Back
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 Tv Vol+	 Shift + Vol +
 Tv Vol-	 Shift + Vol -
 Up Tv	 Shift + Up
 Down Tv	 Shift + Down
 Right Tv	 Shift + Right
 Left Tv	 Shift + Left
 []/Display	 3D
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 >>/>/Tuning +	 >>
 <</</Tuning -	 <<
 >>/>/Preset+	 >>I
 I<</</Preset-	 I<<
 OK Tv	 Shift + Ok





Original	Replacement	Original	Replacement
	 Format		
	 TV/R		
	 +  Shift + Menu		
	 Pre Ch		

