

 




Original		Replacement		Original		Replacement	
	Power		Power		P < P		Display / Media
	Up		Up		0		0
	Left		Left		Aspect		Picture / Format
	Right		Right		Swap		Back / Return
	Down		Down		P - / CH -		CH- / Page-
	M Menu		Menu / Home		P + / CH +		CH+ / Page+
	[i] Info		Info / Angle		Vol -		Vol-
	OK		OK		Vol +		Vol+
	1		1		Mute		Mute / Dimmer
	2		2		I - II		Audio / Lang I/II
	3		3		[TV]		Smart / List
	4		4		Source		AV / Input / RDS
	5		5		Red / PIP		Red / Netflix / Search
	6		6		Green		Green / APP / Repeat
	7		7		Yellow		Yellow / YouTube / Repeat
	8		8		Blue		Blue / Prime Video / Random
	9		9		Text		Text / Goto





Original	Replacement	Original	Replacement
	TIMER SLEEP Sleep / Timer		
	HOLD Stop / Hold		
	CLEAR EXIT CANCEL Exit / Cancel / Clear		
	SHIFT + GOTO TEXT Shift + Text /		
	SIZE ZOOM Zoom / Size		
	OPT-TOOLS SETUP Setup / OPT /		
	TOP MENU D.MENU D.Menu / Top		

Original	Replacement

