 




 
 


 



 



 
 


 


 



 



 
 


 

 

 











 
 




 


 

 









Original	Replacement	Original	Replacement
 On/Standby	 Power	 Group Up	 Up
 1	 1	 Group Down	 Down
 2	 2	 >>I	 >>I
 3	 3	 >>I	 Right
 4	 4	 I<<	 I<<
 5	 5	 I<<	 Left
 6	 6	 Stop	 Stop
 7	 7	 Stop	 Ok
 8	 8	 Play Mode	 SHIFT +  Shift + Play
 9	 9	 AUX	 Red
 +10	 0	 Play/Pause CD	 Play
 +10	 Guide	 <> Tape	 Yellow
 +100	 Pre Ch	 Tuner Band	 Blue
 Display	 Info	 Repeat	 Text
 Cancel	 Back	 Reverse Mode	 TV/R
 Set	 Menu	 FM Mode	 Media
 Sleep	 Sleep	 Sound	 Dual





	Original	Replacement	Original	Replacement
	ACS	 Smart		
	Vol+	 Vol +		
	Vol-	 Vol -		
	Super Woofer	 Ch +		
	Super Woofer Volume-	 Ch -		
	Clock Timer	 AV		

