

















 

 



 







 















 



 



 





 









Original	Replacement	Original	Replacement
 Standby	 Power	 Down / CH -	 CH- / Page-
 DTV / VCR	 Shift + 1	 Down / CH -	 Down
 DTV / VCR	 Shift + 4	 Favorite	 Fav / Marker / PC
 DTV / VCR	 Display / Media	 1	 1
 Mute	 Mute / Dimmer	 2	 2
 Info	 Info / Angle	 3	 3
 Pause	 Pause / Step / Freeze	 Game	 Smart / List
 Menu	 Menu / Home	 4	 4
 EPG	 Guide / EPG / -/--	 5	 5
 Exit	 Exit / Cancel / Clear	 6	 6
 Up / CH +	 CH+ / Page+	 Recall	 Back / Return
 Up / CH +	 Up	 7	 7
 Left / Vol -	 Left	 8	 8
 Left / Vol -	 Vol-	 9	 9
 OK	 OK	 0	 0
 Right / Vol +	 Right	 TV / Radio	 TV/Radio /
 Right / Vol +	 Vol+	 Audio	 Audio / Lang I/II





Original	Replacement
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Replacement

