

 

 

 
 
 
 
 

 

 

 
 
 
 
 

 

 






 




 






 


 




 



 






Original	Replacement
 Power	 Power
 Play Mode	 Shift + Play
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10/-/-	 Guide
 Repeat	 Text
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Replacement
 DVD	 Red
 Radio	 TV/R
 Ext-In	 Yellow
 << Slow Search	 <<
 Play	 Play
 Slow Search >>	 >>
 I<< Skip/Down	 I<<
 Pause	 Pause
 Skip >>I/Up	 >>I
 Stop	 Stop
 Surround	 Subt
 Sound	 Dual
 Top Menu/Direct Navigator	 List
 Start	 Smart
 Functions	 Options
 Menu/Play List	 Menu
 Return	 Back





Original	Replacement	Original	Replacement
 Up	 Up		
 Down	 Down		
 Right/II>	 Right		
 Left/<II	 Left		
 OK	 Ok		
 Setup/-CH Select	 D. Menu		
 W.SRD	 AV		
 FL Display/-Sleep	 Sleep		
 Cancel	 Exit		
 Power Tv	 Shift + Power		
 AV Tv	 Shift + AV		
 Vol+ Tv	 Shift + Vol +		
 Vol- Tv	 Shift + Vol -		

