

 

 

 
 

 
 
 
 
 

 





 
 



 
 
 
 
 
 

 




Original	Replacement
	Power
	Info / Angle
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Fav / Marker / PC
	0
	Back / Return
	Guide / EPG / -/--
	Exit / Cancel / Clear

Original	Replacement
	Menu / Home
	AV / Input / RDS
	Up
	Left
	OK
	Right
	Vol+
	Down
	CH+ / Page+
	Vol-
	CH- / Page-
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Picture / Format
	Sound / Title





Original	Replacement	Original	Replacement
	Sleep		Sleep / Timer
	Tamaño		Zoom / Size
	Grabar		Rec / Rec Mode
	List.Grab		Smart / List
	TXT		Text / Goto
	USB		Shift + 8
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Audio		Audio / Lang I/II
	Subtitulo		Subtitle / EQ

