


 
 

 
 
 
 



 

 




 
 







 



 



 



 



 

 



 



 

 




 



 




Original	Replacement	Original	Replacement
 Power	 Power	 S.Mode	 Dual
 Tv/AV	 AV	 Call	 Back
 1	 1	 P.Mode	 3D
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 CH+	 Ch +
 7	 7	 CH-	 Ch -
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 Menu	 Menu
 -/--	 Guide	 TXT/TV	 Text
 System	 Media	 Mix	 Subt
 Mute	 Mute	 Sub/Nicam	 Smart
 Sleep	 Sleep	 Hold	 Options
 Recall	 Pre Ch	 Reveal	 TV/R





Original	Replacement	Original	Replacement
INDEX	Index	DISPLAY INFO	Info
SIZE	Size	PICTURE FORMAT	Format
CANCEL	Cancel	CLEAR EXIT	Exit
RED	Red	A	Red
GREEN	Green	B	Green
YELLOW	Yellow	C	Yellow
CYAN	Cyan	D	Blue

