


 
 




 






 



 

 


 


 
 






 




 
 
 

 
 
 
 



 







Original	Replacement
 Standby	 Power
 DTV/VCR	 Smart
 Text	 Text
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Info	 Info
 EPG	 Guide
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<	 <<
 >>	 >>
 I<<	 I<<
 >>I	 >>I
 Setup	 Menu
 Exit	 Exit

Original	Replacement
 Source	 AV
 Tv/Radio	 TV/R
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Down	 Down
 Right/FAV+	 Right
 Left/FAV-	 Left
 Enter	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Original		Replacement		Original		Replacement	
	9		9				
	0		0				
	Recall		Back				
	Goto		3D				
	Favorite		Pre Ch				
	Mode		Media				
	Audio	 + 	Shift + Dual				
	Language		Dual				
	Red/Repeat		Red				
	Green/A-B		Green				
	Yellow/Zoom		Yellow				
	Blue/Subtitle		Blue				

