
 





Original	Replacement	Original	Replacement
 Power	 Power	 Timer/Prog.	 Sleep
 Input Select	 AV	 Time Slip	 Guide
 Open/Close	 Eject	 Setup	 Options
 1	 1	 Audio	 Dual
 2	 2	 Clear	 Exit
 3	 3	 Chapter Mark	 List
 4	 4	 Disc Menu	 D. Menu
 5	 5	 Top Menu	 Menu
 6	 6	 Return	 Back
 7	 7	 Display	 Info
 8	 8	 Up	 Up
 9	 9	 Enter	 Ok
 0	 0	 Down	 Down
 Prog+	 Ch +	 Right	 Right
 Prog-	 Ch -	 Left	 Left
 Satellite Link	 Media	 I<< Skip	 I<<
 Mode	 Smart	 Skip >>I	 >>I





Original	Replacement
<<	<<
>>	>>
Play	Play
Stop	Stop
Pause	Pause
HDD/DVD Rec	Rec
Variable Replay	Format
Variable Skip	3D
>II/Adjust+	SHIFT + Shift + Right
II</Adjust-	SHIFT + Shift + Left
DVD	D Blue
HDD	C Yellow
AV Select	A Red
Rec Mode	SHIFT + Shift + Rec
Search	TV/R
Repeat	TEXT
Dubbing	AD SUBT

Original	Replacement
1.3x/0.8x Play	Green

