 

 
 

 



 





 
 
 


 
 
 

 
 


 
 



 





 




 

 





 
 


 
 
 




 



 




Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Tv/SAT		Smart		P+		Ch +
	Mute		Mute		P-		Ch -
	TV/R		TV/R		Recall		Back
	Goto		Options		DEV		Media
	Audio		Dual		Up/CH+		Up
	Aspect		3D		Down/CH-		Down
	Info		Info		Right		Right
	1		1		Left		Left
	2		2		OK		Ok
	3		3		Vol+		Vol +
	4		4		Vol-		Vol -
	5		5		Menu		Menu
	6		6		EPG		Guide
	7		7		FAV		Pre Ch
	8		8		Exit		Exit
	9		9		TTX		Text





	Original	Replacement		Original	Replacement
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue/Option		Blue		
	Subt.		Subt		
	Zoom		Eject		
	<<		<<		
	>>		>>		
	Play		Play		
	Pause		Pause		
	Stop		Stop		
	Rec		Rec		
	MP		AV		
	V-Format		Format		
	A1		List		
	B2		Sleep		

