







Original	Replacement	Original	Replacement
 Mute	 Mute	 Left	 Left
 Power	 Power	 Enter	 Ok
 Subtitle	 Subt	 Stop	 Stop
 Language	 Dual	 L / R	 3D
 Open / Close	 Eject	 1	 1
 Angle	 Format	 2	 2
 Prog	 Sleep	 Goto	 Media
 Title	 List	 3	 3
 Menu	 Menu	 4	 4
 Vol +	 Vol +	 5	 5
 Vol -	 Vol -	 6	 6
 Setup	 Options	 7	 7
 Play / Pause	 Play	 8	 8
 Play / Pause	 Pause	 9	 9
 Up	 Up	 10+	 Guide
 Down	 Down	 0	 0
 Right	 Right	 << Rev	 <<

Original	Replacement	Original	Replacement
 Mute	 Mute	 TV	 AUX
 Play Mode	 Rec Mode	 DVD	 SAT
 Disc Nav	 Sound	 Play	 Stop
 List	 AD	 Fast Rewind	 Fast Forward
 Prog	 Picture	 Sound	 Settings
 Sleep	 Eco	 Dual	 Subt
 E-Manual	 3D	 Search	 Opt
 D.Menu	 Timer	 Repeat	 Eco
 Top Menu	 Display	 Zoom	 3D
 Menu	 Info	 Text	 AV
 Clear	 Exit	 Up	 OK
 Exit	 Return	 Left	 Right
 Vol +	 Home	 Down	 OK
 Vol -	 Smart	 Return	 Back
 1	 App	 Home	 CH +
 2	 Media	 Smart	 CH -
 3	 1	 App	 1
 4	 2	 Media	 2
 5	 3	 1	 3
 6	 4	 2	 4
 7	 5	 3	 5
 8	 6	 4	 6
 9	 7	 5	 7
 0	 8	 6	 8
 Guide	 9	 7	 9
 A	 10+	 8	 10+
 B	 0	 9	 0
 C	 << Rev	 0	 0
 D	 <<	 << Rev	 <<



