




 

 


 












Original		Replacement		Original		Replacement	
	Power		Power		TV		TV/R
	1		1		AV		AV
	2		2		Up / P+		Up
	3		3		Up / P+		Ch +
	4		4		Down / P-		Down
	5		5		Down / P-		Ch -
	6		6		Right / V+		Right
	7		7		Right / V+		Vol +
	8		8		Left / V-		Left
	9		9		Left / V-		Vol -
	0		0		Menu		Menu
	Mute		Mute		Menu		Ok
	16:9		Format		S / M / D		Smart
	Red		Red		Recall		Pre Ch
	Green		Green		Recall		Back
	Yellow		Yellow		≡		Text
	Blue		Blue		/≡		Options





	Original	Replacement		Original	Replacement
	≡o	 Sleep			
	≡i	 Info			
	Hold	 Pause			
	Size	 Eject			
	≡X	 Exit			
	≡?	 D. Menu			
	PP	 Media			
	i	 Shift + Info			

