







 

 









 



 

 







Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 Picture	 Picture / Format
 Sound	 Sound / Title
 Multimedia	 Display / Media
 Source	 AV / Input / RDS
 Aspect	 Shift + Picture / Format
 Up / PR +	 CH+ / Page+
 Up / PR +	 Up
 Recall	 Back / Return
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 Menu	 Menu / Home
 Right / Vol +	 Vol+
 Right / Vol +	 Right
 Prev PR	 Fav / Marker / PC
 Down / PR -	 Down

Original	Replacement
 Down / PR -	 CH- / Page-
 OK	 OK
 Red / P.Mode	 Red / Netflix / Search
 Green / P.Still	 Green / APP / Repeat
 Yellow / P.Swap	 Yellow / YouTube / Repeat
 Blue / P.Input	 Blue / Prime Video / Random
 Dynamic Bass	 Smart / List
 3D - Panorama	 TV/Radio /
 P.PR +	 Shift + CH+ /
 Audio I / II	 Audio / Lang I/II
 Still	 Pause / Step / Freeze
 P.PR -	 Shift + CH- /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Original	Replacement
	6	 6
	7	 7
	8	 8
	9	 9
	Lock	 Exit / Cancel / Clear
	0	 0
	Sleep	 Sleep / Timer
	[≡]	 Text / Goto
	[≡?]	 Eject / Surround
	[≡X]	 Subtitle / EQ
	Size	 Zoom / Size
	[≡o]	 Guide / EPG / -/--
	Hold	 Stop / Hold
	[/≡]	 Setup / OPT /
	[≡i]	 Info / Angle

Original	Replacement

