

 






 

 
 
 
 
 


 
 
 



 
 







Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back
	Null		Shift + Eject
	Vol+		Vol +
	Vol-		Vol -
	Aspect		3D
	Audio		Dual
	Display		Info
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	Input		AV
	PMode		Shift + Format
	Ch.List		List
	SMode		Shift + Dual
	FAV		Pre Ch





	Original	Replacement	Original	Replacement
	EPG	 Guide		>>I
	TV/Radio	 TV/R		I<<
	Subtitle	 Subt		Red
	Text	 Text		Green
	Index	 Smart	 Yellow/ (A)	Yellow
	Mix	 Eject		Blue
	Hold	 Media		
	Reveal	 Options		
	Subpage	 +  Shift + Subt		
	Cancel	 D. Menu		
	Size	 Format		
	Rec	 Rec		
	Stop	 Stop		
	Play	 Play		
	T-Shift/Pause	 Pause		
	<<	 <<		
	>>	 >>		

