 


 




 







 







 















































Original	Replacement	Original	Replacement
 Power	 Power	 ---/	 Shift + Guide / EPG / ---/
 Mute	 Mute / Dimmer	 Jump	 Smart / List
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 P.Mode	 Picture / Format	 Info	 Info / Angle
 S.Mode	 Sound / Title	 Sleep	 Sleep / Timer
 I/II/Audio	 Audio / Lang I/II	 Exit	 Exit / Cancel / Clear
 P.Size	 Zoom / Size	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 Enter	 OK
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Vol+	 Vol+
 6	 6	 Vol-	 Vol-
 7	 7	 P-	 CH- / Page-
 8	 8	 P+	 CH+ / Page+
 9	 9	 Red/D.Setup	 Red / Netflix / Search
 0	 0	 Red/D.Setup	 Setup / OPT /





Original		Replacement		Original		Replacement	
	Green/Repeat		Green / APP / Repeat		>>I		>>I / Preset+
	Yellow/Zoom		Yellow / YouTube / Repeat		DVD Menu		D.Menu / Top
	Yellow/Zoom		Shift + Zoom /		Text		Text / Goto
	Blue/Goto		Blue / Prime Video / Random		Subtitle		Subtitle / EQ
	Blue/Goto		Shift + Text /		Guide		Guide / EPG / -/-
	[≡i]/FAV.CH		Fav / Marker / PC				
	[≡?]/Freeze		Shift + Pause / Step /				
	[≡◆]/USB/SD		Shift + 8				
	[≡+]/Tv/Radio		TV/Radio /				
	Rec		Rec / Rec Mode				
	Stop		Stop / Hold				
	Open/Close		Eject / Surround				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	<<		<< / Tune-				
	>>		>> / Tune+				
	I<<		I<< / Preset-				

