



| Original | Replacement | Original | Replacement |
|--|--|---|--|
|  Standby |  Power |  Green/Smart |  Green |
|  1 |  1 |  Yellow/Lock |  Yellow |
|  2 |  2 |  Blue/Sleep |  Blue |
|  3 |  3 |  Menu |  Menu |
|  4 |  4 |  Teletext |  Text |
|  5 |  5 |  P+ |  Ch + |
|  6 |  6 |  P- |  Ch - |
|  7 |  7 |  Up |  Up |
|  8 |  8 |  Down |  Down |
|  9 |  9 |  Right |  Right |
|  0 |  0 |  Left |  Left |
|  P<P |  Pre Ch |  OK |  Ok |
|  Clear |  Exit |  Vol+ |  Vol + |
|  Mute |  Mute |  Vol- |  Vol - |
|  Record |  Rec |  >I/Index |  Format |
|  Timer |  AV |  >I</Still |  3D |
|  Red/Select |  Red |  << |  << |



