



Original	Replacement
Muting	Mute / Dimmer

Original	Replacement





Original	Replacement
3	3
4	4
5	5
6	6
7	7
8	8
9	9
>10	Guide / EPG / -/--
0	0
Repeat	Green / APP / Repeat
Play Mode	Shift + Play /
Stereo/Mono	Shift + Audio / Lang I/II
Function	Shift + Setup / OPT / Tools
DVD Top Menu	Shift + Menu /
Sound Field+	Shift + Vol+
Night Mode	Shift + Smart / List
Sound Field-	Shift + Vol-

Original	Replacement
Enter1	Shift + 1
DVD Display	Shift + 2



