


 



 

 





 





 



 

 

 

 









 


 


 
 
 
 





 



Original	Replacement
 Power	 Power
 VCR/DVD	 Media
 DVD Timer	 Green
 VCR Timer	 Red
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AUX	 0
 X/Cancel	 Exit
 Showview/Video Plus+	 Guide
 Prog/Check	 Sleep

Original	Replacement
 Display	 Info
 On Screen/Progressiv	 3D
 Top	 Shift + Menu
 Menu	 Menu
 Set Up	 Options
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 I<</Previous	 I<<
 >>/Next	 >>I
 <</Slow-	 <<
 Play/Select	 Play
 >>/Slow+	 >>
 Stop/Clear	 Stop




 

 

 






 

 

 









 

 

 









 







 



 



 





 

 






Original		Replacement		Original		Replacement	
	Pause		Pause				
	Rec		Rec				
	Remain/Rec		Shift + Rec				
	←		Pre Ch				
	→		Blue				
	Angle/Live Check		AV				
	Subtitle		Subt				
	TV/DVD-TV/VCR		TV/R				
	Mute/Audio		Mute				
	PR+		Ch +				
	PR- TV/CBL/DVD		Ch -				
	Vol+ Tv		Vol +				
	Vol- Tv		Vol -				





 



 
 





Original	Replacement	Original	Replacement
 Power	 Power	 Prog/Check	 Sleep
 VCR/DVD	 Media	 Display	 Info
 DVD Timer	 Green	 On  Screen/Progressiv	 3D
 VCR Timer	 Red	 Top	 Shift + Menu
 1	 1	 Menu	 Menu
 2	 2	 Set Up	 Options
 3	 3	 Return	 Back
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 I<</Previous	 I<<
 0/AUX	 0	 >>/Next	 >>I
 X/Cancel	 Exit	 <</Slow-	 <<
 Memory/Mark	 Smart	 Play Select	 Play
 Showview/Video Plus+	 Guide	 >>/Slow+	 >>





Original		Replacement		Original	Replacement
	Stop/Clear		Stop		
	Pause		Pause		
	Rec		Rec		
	Remain/Rec		Shift + Rec		
	↔		Pre Ch		
	→		Blue		
	Angle/Live Check		AV		
	Subtitle		Subt		
	TV/DVD-TV/VCR		TV/R		
	Mute/Audio		Mute		
	PR+		Ch +		
	PR- TV/CBL/DVD		Ch -		
	Vol+ Tv		Vol +		
	Vol- Tv		Vol -		





Original	Replacement	Original	Replacement
Power	Power	Menu	Menu
VCR/DVD	Media	Up	Up
DVD Timer	Green	Down	Down
VCR Timer	Red	Right	Right
1	1	Left	Left
2	2	Enter	Ok
3	3	I<</Previous	I<<
4	4	>>/Next	>>I
5	5	<</Slow-	<<
6	6	Play/Select	Play
7	7	>>/Slow+	>>
8	8	Stop/Clear	Stop
9	9	Pause	Pause
0/AUX	0	Rec	Rec
Prog/Check	Sleep	Remain/Rec	Shift + Rec
Display	Info	↔	Pre Ch
Top	Shift + Menu	→	Blue

Original	Replacement	Original	Replacement
Power	Power	Menu	Menu
VCR/DVD	Media	Up	Up
DVD Timer	Green	Down	Down
VCR Timer	Red	Right	Right
1	1	Left	Left
2	2	Enter	Ok
3	3	I<</Previous	I<<
4	4	>>/Next	>>I
5	5	<</Slow-	<<
6	6	Play/Select	Play
7	7	>>/Slow+	>>
8	8	Stop/Clear	Stop
9	9	Pause	Pause
0/AUX	0	Rec	Rec
Prog/Check	Sleep	Remain/Rec	Shift + Rec
Display	Info	↔	Pre Ch
Top	Shift + Menu	→	Blue





Original		Replacement		Original		Replacement	
	Angle/Live Check		AV				
	Subtitle		Subt				
	PR+		Ch +				
	PR- TV/CBL/DVD		Ch -				
	Vol+ Tv		Vol +				
	Vol- Tv		Vol -				

