



Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 EPG	 Guide / EPG / -/--	 Display	 Display / Media
 REP	 TV/Radio /	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 Rec List	 Shift + Rec / Rec Mode	 Right	 Right
 CH List	 Smart / List	 Menu	 Menu / Home
 Subtitle	 Subtitle / EQ	 Down	 Down
 Eject	 Eject / Surround	 Exit	 Exit / Cancel / Clear
 Rec	 Rec / Rec Mode	 1	 1
 Stop	 Stop / Hold	 2	 2
 I<<	 I<< / Preset-	 3	 3
 >>I	 >>I / Preset+	 4	 4
 Pause	 Pause / Step / Freeze	 5	 5
 Play	 Play / Slow	 6	 6
 <<	 << / Tune-	 7	 7
 >>	 >> / Tune+	 8	 8
 Source	 AV / Input / RDS	 9	 9





Original		Replacement		Original		Replacement	
[0]	0	[HDMI - BAT]	0	[REVEAL TITLE]	Title / Reveal	[SHIFT] + [TITLE SOUND]	Shift + Sound / Title
[↶]	Recall	[RETURN BACK]	Back / Return	[PRO]	PRO	[SHIFT] + [MEDIA DISPLAY]	Shift + Display / Media
[FAV]	Fav	[PC FAV MARKER]	Fav / Marker / PC	[HOLD LAN]	LAN / Hold	[SHIFT] + [LIST SMART]	Shift + Smart / List
[▲ VOL]	Vol +	[+ VOL]	Vol+	[SIZE A-B]	Size / A-B	[SIZE ZOOM]	Zoom / Size
[PICTURE]	Picture	[FORMAT PICTURE]	Picture / Format	[SUBPAGE GOTO]	Goto / Subpage	[GOTO TEXT]	Text / Goto
[NICAM/A2]	Nicam / A2	[LANG I/II AUDIO]	Audio / Lang I/II	[INDEX SLOW]	Index / Slow	[ANGLE INFO]	Info / Angle
[▲ CH]	CH +	[+ CH PAGE]	CH+ / Page+				
[▼ VOL]	Vol -	[VOL -]	Vol-				
[SOUND]	Sound	[TITLE SOUND]	Sound / Title				
[SLEEP]	Sleep	[TIMER SLEEP]	Sleep / Timer				
[▼ CH]	CH -	[CH PAGE -]	CH- / Page-				
[REDACTED]	Red	[NETFLIX SEARCH]	Red / Netflix / Search				
[GREEN]	Green	[APP REPEAT]	Green / APP / Repeat				
[YELLOW]	Yellow	[YouTube REPEAT A-B]	Yellow / YouTube / Repeat				
[SCREEN]	Blue / Screen	[Prime Video RANDOM]	Blue / Prime Video / Random				
[TV/TXT SETUP]	Setup / TV/Txt	[OPT-TOOLS SETUP]	Setup / OPT /				
[CANCEL D-MENU]	D-Menu /	[TOP MENU D.MENU]	D.Menu / Top				



Cancel Menu