



Original	Replacement
Standby	Power
AQT/Auto/Open/CI	Eject / Surround
P.Mode	Picture / Format
S.Mode	Sound / Title
List/Angle	Smart / List
Aspect	Shift + Picture / Format
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Back	Back / Return

Original	Replacement
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+
Vol-	Vol-
Audio	Audio / Lang I/II
CH-	CH- / Page-
Sub-T	Subtitle / EQ
Menu	Menu / Home
[i+]/Info	Info / Angle
Input	AV / Input / RDS
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Exit	Exit / Cancel / Clear
DVD Setup	Shift + 2





Original	Replacement	Original	Replacement
Rec	Rec / Rec Mode	♥-/D.Disp	+ Shift + Guide / EPG / -/--
Sleep	Sleep / Timer	♥/D.Title	Fav / Marker / PC
Red/D.Prog	Red / Netflix / Search	♥+/D.Goto	Text / Goto
Tv/R	TV/Radio /		
Green/Step	Green / APP / Repeat		
Yellow/RPT	Yellow / YouTube / Repeat		
Blue/A-B/SCR	Blue / Prime Video / Random		
[=]/Slow	+ Shift + Play /		
[=▲]/Stop	+ Shift + Up		
[=▼]/Zoom	+ Shift + Down		
[=i]/I<<	I<< / Preset-		
Play	Play / Slow		
[=+]/Pause	Pause / Step / Freeze		
[=+]/>>I	>>I / Preset+		
[=?]/<<	<< / Tune-		
EPG/D.Menu	Guide / EPG / -/--		
[=o]/>>	>> / Tune+		

