










 

 




 











Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Red/M	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 OK	 Ok
 PR+	 Ch +
 PR-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 TV	 TV/R
 Video	 AV
 L/?	 Guide
 L/?	 Dual
 PC	 Pre Ch
 Text	 Text
 F[+]	 3D
 Hold/Freeze	 Format
 M/S	 Options





	Original	Replacement		Original	Replacement
	Mute	MUTE			
	PIP	APP MEDIA			
	Auto/Page	HOME SMART			
	i	DISPLAY INFO			
	Timer/Mix	AD SUBT			
	F1	+  1	Shift + 1		
	F2	+  2	Shift + 2		
	F3	+  3	Shift + 3		
	F4	+  4	Shift + 4		

