



 







 





 





 





 
 
 






 
 






 
Original	Replacement
 Standby/On	 Power
 Program/Rando	 Shift + Sleep
 Return	 Back
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Angle	 Smart
 A.Replay	 D. Menu
 Zoom	 Shift + Eject

Original	Replacement
 Audio	 Dual
 Sleep	 Sleep
 Test	 Guide
 Clear	 Exit
 Picture Mode	 Format
 Trim	 AV
 RDS	 Subt
 Surround	 Shift + List
 Tune/Band	 Green
 Mute	 Mute
 Bass	 Yellow
 Function	 Red
 Sound	 Shift + Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Setup	 Options





Original	Replacement
 Top Menu	 Shift + Menu
 On Screen	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Pause	 Pause
 Play	 Play
 Stop	 Stop
 <</Tune/PTY-	 <<
 Tune/PTY+/>>	 >>
  <</Preset+/PTY	  <<
 Preset+/PTY	 >>
 < /R.Slow	 Ch -
 F.Slow/ >	 Ch +
 S.T.CH	 Media

Original	Replacement
 S.T.On/Off	 List
 Search Mode	 TV/R
 L.Memo	 3D
 A-B Rep	 Shift + Text
 Repeat	 Text

