



Original	Replacement
Power	Power
Input	AV / Input / RDS
Monitor On	Shift + Up
Monitor Off	Shift + Down
Energy Saving	Smart / List
3D	Picture / Format
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
1/a/A	Shift + 1
0	0

Original	Replacement
Clear	Shift + Exit / Cancel / Clear
Vol+	Vol+
ARC	Display / Media
Brightness(Page)	CH+ / Page+
Vol-	Vol-
Auto	Text / Goto
Brightness(Page) Down	CH- / Page-
Mute	Mute / Dimmer
PSM	Shift + Display / Media
Home	Menu / Home
W.Bal	Zoom / Size
Settings	Setup / OPT /
Up	Up
S.Menu	D.Menu / Top
Left	Left
OK	OK
Right	Right





Original	Replacement	Original	Replacement
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Simplink	 + 	Shift + Smart / List
	Tile		Sound / Title
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Red/On Picture ID		Red / Netflix / Search
	Green/Off Picture ID		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

