






 
 













 

 
 
 
 
 



 

 

 





 

 
 
 
 
 
 
 
 



 
















Original	Replacement	Original	Replacement
	Power		Power
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DVD/DVB		Smart
	Tv/Radio		TV/R
	Digest		Format
	Angle/FAV		Pre Ch
	A-B/Return		Back
	Title/PgUp		Ch +
	Prog/PgDn		Ch -
	Zoom/EPG		Guide
	SUB-T		Subt
	TTX		Text
	PBC/Menu		Menu
	Audio		Dual
	Display/Info		Info
	Exit		Exit
	Up/CH+		Up
	Down/CH-		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Goto/List		List





Original	Replacement	Original	Replacement
 Rec	 Rec		
 Stop	 Stop		
 Play	 Play		
 Pause	 Pause		
 <<<	 <<<		
 >>>	 >>>		
 I<<<	 I<<<		
 >>>I	 >>>I		
 Red/Slow	 Red		
 Green/Step	 Green		
 Yellow/Repeat	 Yellow		
 Blue/Direct	 Blue		
 Setup	 Options		
 USB	 AV		
 Mute	 Mute		
 Video	 3D		

