



 

 

 

 
 
 
 

 
 
 


 

 
 
 
 
 
 

 
 

 
 




Original	Replacement	Original	Replacement
	Power		Ch -
	Stop		Up
	Pause		Down
	<<		Right
	Play		Left
	>>		Ok
	>		Source
	<		Options
	Red		Vol +
	Green		Vol -
	Yellow		Mute
	Blue		1
	Find		2
	Adjust		3
	Home		4
	Back		5
	CH+		6



