





 
 

 
 
 
 

 
 






 









 





 





Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Input	 AV	 Exit	 Exit
 TV/TXT	 Text	 Vol+	 Vol +
 Cancel	 Media	 Vol-	 Vol -
 Reveal	 D. Menu	 Channel List	 Smart
 Nicam/A2	 Dual	 EPG	 Guide
 Size	 Format	 Info	 Info
 Hold	 Eject	 Up	 Up
 Index	 TV/R	 Down	 Down
 Subpage	 Options	 Right	 Right
 Red	 Red	 Left	 Left
 Green	 Green	 OK	 Ok
 Yellow	 Yellow	 1	 1
 Blue	 Blue	 2	 2
 CH+	 Ch +	 3	 3
 CH-	 Ch -	 4	 4
 Mute	 Mute	 5	 5





Original	Replacement
6	6
7	7
8	8
9	9
0	0
FAV	Pre Ch
Recall	Back
Picture	Shift + Format
Sound	Shift + Dual
Sleep	Sleep
Subtitle	Subt
Rec	Rec
Aspect	3D
<<	<<
>>	>>
<<	<<
>>	>>

Original	Replacement
Play	Play
Pause	Pause
Stop	Stop
List	List
Repeat	Shift + Text

